

SimPal-WS250

GSM Outdoor Power Socket

User Manual

Manual version 1.0

www.simpal.fi

support@simpal.fi

SimPal-WS250 GSM Outdoor Power Socket

Thank you for purchasing the SimPal-WS250.

SimPal-WS250 GSM outdoor power socket is a remote-controlled socket consisting of a GSM module. With outdoor waterproof IP44 design, the power supply output can be turned on or off remotely by the SMS command or voice calling. It can work as a router for slave socket SimPal-T20-V2/SimPal-S20 and wireless accessories. Each SimPal-WS250 can connect 4 pcs slave socket, 6 pcs wireless sensor.

SimPal-WS250 can work with WTL-063-F Wireless Temperature & Light sensor. With this sensor, it can report temperature changes, set thermostat control and automatically turn on power at dusk.

All services and functions need to be supported by the GSM network and a SIM card.

This brochure suits for **SimPal-WS250** model.

Details of the functioning and advanced operation of this socket are described in this instruction manual.

CONTENT

<i>For your safety</i>	6
<i>Exception clause</i>	8
<i>1.1 Package contents</i>	9
<i>1.2 Sockets instructions</i>	10
<i>1.3 LED indicator</i>	11
<i>2.1 User authorization level</i>	11
<i>2.2 About the SMS Command</i>	12
<i>3.1 Start to use</i>	13
<i>3.2 Download “GSM Socket V3” APP</i>	15
<i>3.3 Register Master-number.</i>	15
<i>3.4 Turn on/off power</i>	17
<i>3.5 Power load alarm</i>	18
<i>3.6 Delay control</i>	20

3.7 Schedule control	21
3.8 Temperature control	23
3.9 Temperature alarm	26
3.10 Twilight power control	27
3.11 Wireless sensor alarm	28
3.12 Pairing slave socket	30
3.13 SMS when on/off button pressed	32
3.14 Power failure alarm	32
3.15 Calling control	33
3.16 SMS notification to User	34
3.17 Check status	34
3.18 Weak GSM signal alarm	36
4. Reset factory setting	37
5. Main Technical Parameters	38
Appendix: SMS commands list	39



- 1. Purchase a GSM SIM card (mobile phone card) from GSM network service provider and install it in the socket. This SIM card number is referred as SimPal-WS250 number on this brochure.**
- 2. The user needs to activate the Caller ID Presentation function of SIM card, and deactivate PIN code of the SIM. Contact with GSM network service provider for support.**

For your safety


- This socket was designed waterproof IP44, forbid to put inside water or installed in open air. It is recommended to install in outdoor places with ceiling protection.
- Please ensure that the mobile phone is allowed to be used in this area, otherwise, do not use this socket.
- The power consumption of the appliances connected with the socket cannot exceed 3500W and the current cannot exceed 16A.
- The electrical appliance which power consumption is higher than 1500W must be grounded.
- Do not make two plugs of socket short circuit.
- Do not touch the socket jack by any metal objects or hand.
- Do not plug this socket in a row, only allow connect other electricity device on the socket. (nicht hintereinander stecken, nur andere Stromgeräte an der Steckdose anschließen lassen).
- Do not open the case unless maintenance needed by professionals.

- Do not keep shaking or fall down this socket, otherwise it can be damaged.
- This socket is a wireless signal transmission socket. Keep it away from electronic equipment likely to interfere with the wireless signals, in order to avoid signals interference.
- Switch off this socket and mobile phone when entering areas marked "Explosive", "Might explode", "Closed wireless transceiver sockets" etc.
- Do not cast this socket in a fire, as this may cause explosion.
- Keep the socket and its accessories out of the children reach.


Exception clause

1. We operate on a policy of continuous development. We reserve the right to make changes and improvements to any of the sockets described in this document without prior notice.
2. For the latest socket information, please visit: <http://www.simpal.cn>. We don't guarantee for the document veracity, reliability or any content except regulate in proper laws. Including no guarantee for socket suitable market or suitable area promise.
3. We hold no responsibility for the illegal use of this socket.
4. We hold no responsibility for any loss of income or any special, incidental, consequential or indirect damages howsoever caused.
5. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either expressed or implied, including, but not limited to the accuracy, reliability or contents of this document. We reserve the right to revise this document or cancel some functions at any time without prior notice

1.1 Package contents

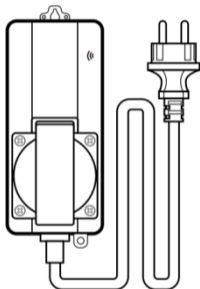


4G Socket
(1 unit)

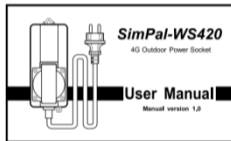

User manual
(1 PC)

1.2 Sockets instructions

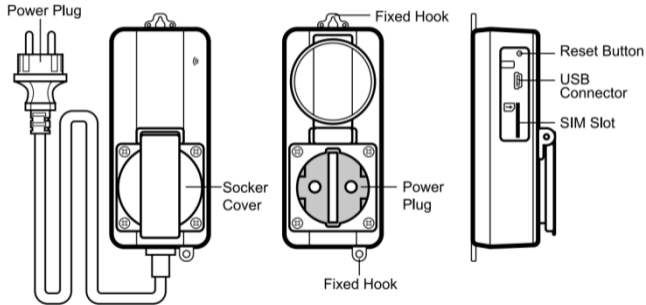

1.3 LED indicator

Color	Action	Status
RED	Slowly breath	Power ON, Standby and sensor alarm OFF.
	Constant light	Power ON, Standby and sensor alarm ON.
	Flash fast	Power ON, lost network connection or sending SMS.
Blue	Slowly breath	Power OFF, Standby and sensor alarm OFF.
	Constant light	Power OFF, Standby and sensor alarm ON.
	Flash fast	Power OFF, lost network connection or sending SMS.

2.1 User authorization level

Socket settings can be set or adjusted via a SMS command.

There are two mobile phone user controlling levels:

Master-user (“Master”):

Only one **Master** has authorization to use all features of SimPal-WS250.

In order to enable all the functions on the socket, the **Master** must store his/ her mobile number in the socket's memory. Only one **Master's** mobile number is allowed for a socket.

Family users (“Family”):

There are four families have authorization to control the device, Family number can receive SMS notification or change device setting.

The other mobile phone users have no authorization to control the socket.

2.2 About the SMS Command

- **SMS command format:** #code#content#.
- The maximum digits that are allows for the phone number is sixteen.
- SimPal-WS250 will reply to the user after it receives the SMS command.




Note

- The “#” symbol must not be ignored when typing an SMS command.
- No allow any space within the commands.

3.1 Start to use

- Open the cover of the SIM card slot, and push it upwards at the bevel.
- Installed SIM card to SimPal-WS250 GSM power socket; you will see a SIM card slot inside, make the SIM card metal contact upside, round corner on the right, and hardly push the SIM card until SIM card fixed.
- Install back the SIM card slot cover.
- Install the socket vertically on the wall and fix the two clips on the socket with screws. Make sure the cover of the socket is opened upward to prevent rainwater from seeping into the cover

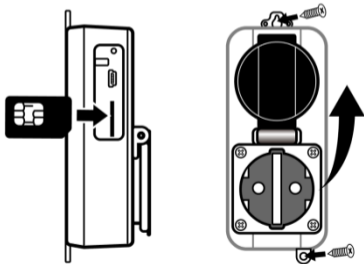

Power on:

1. Plug the SimPal-WS250 in an AC power socket.

The LED will be flashing slowly for about 15 seconds, and turn to slowly breathe status and beep ring, breathe LED means the socket already register GSM network, its ready to working.

The socket default LED in blue and power output is OFF.

2. Insert the plug of electronic appliance in the SimPal-WS250 electrical outlet.
3. After register numbers to the socket, users can send SMS command or make calling to control the power supply output.



Note:

1. If the LED light flashing fast all the time, which imply the SIM card working abnormally, all functions of this socket are invalid.
2. Check GSM network signal of the using place:
 - GSM network's signal strength may affect the socket feature. Therefore, before using, the user should ensure that SimPal-WS250 is used in an area with a strong GSM

network signal (CSQ higher than 10).

3.2 Download “GSM Socket V3” APP

We offer free APP to work with SimPal-WS250, search “GSM Socket V3” on Google Play or Apple APP Store, download and install the APP, then it can use APP to control SimPal-WS250.

First time register device on APP, input device name and SIM card number which installed on SimPal-WS250 device. The APP will create SMS content, send the SMS to device, it will operate according APP function description.

Even without APP, user can send SMS manually according following instruction.

3.3 Register Master-number.

Sending following SMS to socket SIM card number from your mobile phone (the phone

number will be the **Master** number):

Register Master-number: #00# (1)

3.3.1 Change Master number

Master sends following SMS message in order to:

Change master-number: #14#*NewMasterNumber* (2)

- *NewMasterNumber* should be the new Master mobile phone number.

3.3.2 Register Family-number

Up to 4 Family-number can be stored on GSM socket.

Family-number have the authority to change device setting and receive SMS notification.

Method

Master sends following SMS message in order to:

Register a Family: #06#*Family-Number*# (3)

- **Family-Number** should be the User's mobile phone number. It request to fill country code for Family number. For example: +49123456780

Check Family number:

Master sending SMS to check Family number: #06# (4)

Delete Family

Method

Master sends following SMS message in order to:

Delete a Family: #15#Family-Number # (5)

Delete all Family numbers: #15# (6)

3.4 Turn on/off power

Method

Master sends following SMS message to socket in order to set:

Master socket power - ON: #01#0# (7)

Master socket and all Slave socket power – ON: #01# (8)

Master socket power - OFF: #02#0# (9)

Master socket and all Slave socket power – OFF: #02# (10)

3.5 Power load alarm

Description

The socket support power load alarm function. It can monitor connected appliances power consumption and report power consumption daily, weekly or monthly. Also can set power load alarm, it will send SMS when power load out or back setting range,

Method

Master sends following SMS message in order to:

Check power load: #07# (11)

Check today power consumption: #52#1# (12)

Check this week power consumption: #52#2# (13)

Check this month power consumption: #52#3# (14)

Set power loading alarm - ON: #53#0#1# (15)

Set power loading range: #53#0#MinValue#MaxValue# (16)

- **MinValue** and **MaxValue**: The values can be set within the range of 0 to 3500, means 0-3500W. Default value is 5-3500.
- The power alarm is executed only when the power is turned on. When the power is turned off, the power is always zero, it does not send alarm message.
- After the power is turned on, it will compare the power before the power is turned off. If the two powers are in the same range, no SMS alarm will be sent.

Set power loading alarm - OFF(default): #53#0#0# (17)

Set daily report power consumption: #54#1# (18)

Set weekly report power consumption: #54#2# (19)

Set monthly report power consumption: #54#3# (20)

Set report power consumption function - OFF(default): #54#0# (21)



Note:

The power consumption data will be lost when the device reboots, it will be newly calculated from the beginning when the socket power is restored.

3.6 Delay control



Description

- The socket output can be set to delay switch ON/OFF for a period of time.
- When the “delayed switch on the socket” command is received and if the socket output is switched on, the socket output will be switched off immediately and will be switched on again as the setting delayed time is reached. Conversely, if the socket output is switched off, the output will remain switched off until the setting delayed time is reached.



Method

Master sends the following SMS message in order to set:

Turn on power after certain minutes: #12#0#Minutes#1# (22)

Turn off power after certain minutes: #12#0#Minutes#0# (23)

Minutes are time parameters, its range is 1-720,

Set delay control – OFF: #11#0# (24)

3.7 Schedule control

3.7.1 Activate schedule control

Description

- The socket power can be set to automatically turn on according schedule.
- It allows to temporary manual change power on/off by send SMS, press button, Delay control etc. Schedule control will activate again when it reach next time point.

Method

Master sends following SMS message in order to:

Set schedule control time period:**#20#0#ID#WorkDay#StartTime#EndTime#****(25)**

- **ID:** the value is 1-3, it means allow to set three group schedules.
- **WorkDay:** one digit, the values lie in the range of "0" to "9".

The following table contains the descriptions of each value: It can select different single day. For example: 125 means Monday, Tuesday and Friday.

Value	Corresponding day
0	Everyday
1	Monday
2	Tuesday
3	Wednesday
4	Thursday
5	Friday
6	Saturday
7	Sunday

- **StartTime** and **EndTime**: Be consists of 4 digits (hh:mm) and works on a 24 hour clock. If **StartTime** bigger than **EndTime**, it will operate until next day EndTime.
- The socket output will switch on at the **StartTime** and cut off at the **EndTime**.
- For example: #20#0#1#12345#0800#2130# , 0 means the SimPal-WS250, 1 means first group schedule, 12345 means from Monday-Friday, 0000 means time 08:00(hh:mm)AM, 2130 means time 21:30. It will turn on power at 08:00, and turn off at 21:30 on Monday- Friday.

Schedule control - OFF: #19#0#0#

(26)

3.8 Temperature control

3.8.1 Pair Temp & Light sensor

Description

Each SimPal-WS250 can pair one WTL-063-F Temp & Light sensor. It will receive

temperature and light level data from this sensor and use the data for temperature alarm, thermostat control and light control.

Master send following SMS to:

Pair Temp & Light sensor: #30#4# (27)

Remove Temp & Light sensor: #45#2# (28)

3.8.1 Activate temperature control

Description

- After paired Temp & Light sensor, the power output can be auto controlled according environment temperature change.
- Temperature control will always activate when the temperature within action range.
- There are warming mode and cooling mode for temperature control function. In warming mode, socket will auto turn on when temperature lower than smaller temperature value, and turn off when higher than bigger temperature value; Cooling mode, socket will auto turn on when temperature higher than bigger temperature value

and turn off when temperature lower than smaller value.

 **Method**

The **Master** sends following SMS message in order to set:

Temperature control - ON: #23#0#1# (29)

Temperature control - OFF: #23#0#0# (30)

3.8.2 Set temperature control parameters

 **Method**

Master sends following SMS message in order to:

Set temp control parameters: #24#0#mode#low-temp#high-temp# (31)

Mode parameter can be 1 or 2, Warming mode is 1, cooling mode is 2;

Temperature range should be within -30 to 70 degree.

For example #24#0#1#15#25#, it means set temperature control parameter, work with

warming mode, turn on power when temperature lower than 15 degree, turn off power when temperature higher than 25 degree.

After successful setting of temperature range, the temperature parameter will be saved on the socket until socket reset to factory settings.

3.9 Temperature alarm

Description

After paired WTL-063-F Temp & Light sensor, it can set temperature alarm for this device. A range of temperature can be pre-set onto the socket. When surroundings temperature is detected out of the pre-set temperature range, It will auto-send the SMS alarm message to your mobile phone.

Method

Master sends following SMS message in order to set:

Temperature alarm - ON: #21#0#1#

(32)

Set temperature range: #22#0#MinTemp#MaxTemp# (33)

- **MinTemp** and **MaxTemp**: The values can be set within the range of -30 to 70 centigrade degree.

Temperature alarm - OFF: #21#0#0# (34)

3.10 Twilight power control

Description

After paired WTL-063-F Temp & Light sensor, it can set this socket twilight power control. The power will automatically turn on at dusk, and turn off at dawn.

Method

Master sends following SMS message in order to set:

Twilight power control - ON: #55#1# (35)

Set delay turn off power at dawn: #55#1#time# (36)

- **Time** range is 1-8, it means 1-8 hours.

Twilight power control - OFF: #55#0#

(37)

3.11 Wireless sensor alarm

Description

SimPal-WS250 can be working with 6pcs wireless sensor and 2pcs remote control, it can use for alarm functions. Only following sensor can be working with WS250:

- WRC-048-F V2 remote control
- WDS-051-F V2 Wireless door sensor
- WIR-053-F V2 Wireless PIR motion detector
- WSI-055-F V2 Wireless strobe siren
- WLD-061-F V2 Wireless water leak detector

There are two types of alarm sensor, one is alarm type, only alarm when WS250 alarm function on, the other one is emergency type, it will always alarm even WS250 alarm

function off. For smoke detector and water leak detector, suggest to pair as emergency type sensor.

Method

Master sends following SMS message in order to:

Pair alarm sensor: #30#1#Name# (38)

Pair emergency sensor: #30#2#name# (39)

Pair remote control: #30#3# (40)

Check pair sensor list: #30# (41)

Remove single sensor: #44#name# (42)

Remove all wireless sensor: #44# (43)

Remove all remote control: #45# (44)

Set alarm function - ON: #40#1# (45)

Set alarm function - OFF: #40#0# (46)

Set schedule alarm time period: #46#ID#day#start-time#end-time# (47)

Schedule alarm parameter day time parameters is same as Schedule control.

Set schedule alarm function - OFF: #47#0# (48)

Pair wireless siren: #43# (49)

Set beeper alarm duration: #50#time# (50)

When sensor alarm, WS250 will beep sound, default beep 10 seconds, it can send SMS to change beep duration. The time range is 0-60. Such as #50#30# to set beep 30 seconds.

3.12 Pairing slave socket

SimPal-WS250 can be working with 4pcs wireless slave socket SimPal-T20-V2 or SimPal-S20. Slave socket needs to buy separately. Master sends SMS to pairing slave socket, before pairing, need to make sure slave socket reset factory setting, if this slave socket already paired before, need to keep press slave socket M button for 10 seconds to reset factory setting. Master send following SMS message in order to:

Pairing Slave socket: #60#name# (51)

After receive SMS reply “Power on “name” socket now! ”, plug the slave socket to main power, slave socket LED flash slowly for some seconds and go to slowly breath status after connected with WS250 socket.



Note

- “name” is the slave socket ID communicate with Master socket, operate slave socket by sending SMS request included “name” in SMS command.
- Request different slave socket “name” for one GSM socket.
- “Name” only can be English letter or digital number, max 7 characters.

Master sends following SMS message in order to:

Remove slave socket: #71#name# (52)

Remove all slave socket: #71# (53)

3.13 SMS when on/off button pressed

Description

SimPal-WS250 will default sending SMS notify Master and Family when press M button to turn on/off power. The Master can enable/disable this SMS notification.

Method

Master sends following SMS message in order to set:

SMS when on/off button pressed - ON (Default): #03#1# (54)

SMS when on/off button pressed - ON: #03#0# (55)

3.14 Power failure alarm

Description

SimPal-WS250 will default sending SMS notify when main power supply lost or restore.

Master can enable/disable this SMS notification.

✦ Method

Master sends following SMS message in order to set:

SMS when power lost or restore - ON (Default): #05#1# (56)

SMS when power lost or restore - OFF: #05#0# (57)

3.15 Calling control

SimPal-WS250 default send SMS reply when Master or Family calling to turn on/off power, it can change the setting to calling control without SMS reply.

✦ Method

Master sends following SMS message in order to:

SMS when calling control – ON (Default): #49#1# (58)

SMS when calling control – OFF: #49#0# (59)

Calling control function – ON (Default): #09#1# (60)

Calling control function – OFF: #09#0# (61)

Allow any number calling control – ON : #31#1# (62)

Allow any number calling control (Default): #31#0# (63)

3.16 SMS notification to User

SimPal-WS250 will sending SMS alert when mains power lost/restore, temperature alert or other information. Default sending SMS to both Master and family. Master can change the setting only send SMS to Master number.

Method

Master sends following SMS message in order to:

SMS to family number – ON (Default): #16#1# (64)

SMS to family number – OFF: #16#0# (65)

3.17 Check status

Method

Master or Family sends following SMS message in order to:

Check Master socket operating status: #07# (66)

After receiving the SMS commands, it will reply SMS message like this:

Main unit: OFF, 22C, 13W, T, S, D, H, L Daylight

“ESP1”: OFF, 25C, 0W, T, S, D

It may display different characters after the power loading, it means the socket under different status. The detail function as following:

“D”: means this socket under delay control.

“S”: means this socket under schedule control.

“T”: means this socket under temperature control.

“H”: means this socket alarm function is on.

“L”: means this socket under twilight control.

“Daylight” or “Night” means the light level from light sensor.

If the socket do not paired with Temp & Light sensor, then it will do not display temperature,

“T”, “L” and light information.

3.18 Weak GSM signal alarm

The socket can send a SMS notification when the GSM signal strength is too weak. The Master user can enable/disable this SMS notification.

Method

The **Master** user sends following SMS message in order to set:

Check GSM signal **#27#**

(67)

Weak GSM signal alarm - ON: **#27#1#** **(68)**

Weak GSM signal alarm - OFF (Default): **#27#0#** **(69)**

The GSM signal is show as CSQ, CSQ range is 0-31, when CSQ lower than 12, it will set as weak GSM signal. When CSQ lower than 10, device will stop working.

4. Reset factory setting

Description

- This function resets all programmed settings to their original values, including cleaning all user number, timing parameter and temperature parameter.
- If the setting status is wrong or the malfunctions can't be corrected, users can restore the socket to its original status to make it work normally.

Master socket reset factory setting:

Method 1: Keep press the side **M** button of the device for 10 seconds.

Method 2: Master sends following SMS message in order to:

Reset Master socket: #08#1234#

(70)

5. Main Technical Parameters

Input power plug	110~230V/50HZ, CEE 7/7 hybrid Schuko/French/American/Australia plug
Output power outlet	110~ 230V/50HZ, 16A CEE7/4 German "Schuko"/ French/ American/Australia
Operating temperature	-30°C~+35°C
Store temperature	-30°C~+50°C
Waterproof level	IP44
Relative humidity	10-90%, without condensation
Communication protocols	GSM PHASE 2/2+ (including data operation)
Data interface	GSM SIM 1.8V/3.0V socket
RF frequency	434Mhz FSK
Slave socket distance	Up to 30 meters
GSM bands	GSM 900/1800Mhz

Appendix: SMS commands list

Category	Function	Command
Define the users	Register Master-number	(1) <u>#00#</u>
	Change Master-number	(2) <u>#14#NewMasterNumber#</u>
	Add Family-number	(3) <u>#06#Family-Number#</u>
	Check Family-number	(4) <u>#06#</u>
	Delete Family-number	(5) <u>#15#Family-Number#</u>
	Delete all Family-number	(6) <u>#15#</u>
Power control	Turn power - ON	(7) <u>#01#0#</u>
	All socket power - ON	(8) <u>#01#</u>
	Turn power - OFF	(9) <u>#02#0#</u>
	All socket power - OFF	(10) <u>#02#</u>

Category	Function	Command
Power Monitor	Check power load	(11) <u>#07#</u>
	Check today power consumption	(12) <u>#52#1#</u>
	Check this week power consumption	(13) <u>#52#2#</u>
	Check this month power consumption	(14) <u>#52#3#</u>
	Power loading alarm - ON	(15) <u>#53#0#1#</u>
	Set power loading range	(16) <u>#53#0#MinValue#MaxValue#</u>
	Power loading alarm - OFF (Default)	(17) <u>#53#0#0#</u>
	Daily report power consumption	(18) <u>#54#1#</u>
	Weekly report power consumption	(19) <u>#54#2#</u>
	Monthly report power consumption	(20) <u>#54#3#</u>

Category	Function	Command
	Report power consumption - OFF (Default)	(21) <u>#54#0#</u>
Delay control	Turn power ON after a certain minutes	(22) <u>#12#0#Minutes#1#</u>
	Turn power OFF after a certain minutes	(23) <u>#12#0#Minutes#0#</u>
	Set delay control – OFF (Default)	(24) <u>#11#0#</u>
Schedule control	Set schedule control time period	(25) <u>#20#0#ID#WorkDay# StartTime#EndTime#</u>
	Set schedule control – OFF (Default)	(26) <u>#19#0#0#</u>
Temperature control	Pair Temp & Light sensor	(27) <u>#30#4#</u>
	Remove Temp & Light sensor	(28) <u>#45#2#</u>
	Temp control - ON	(29) <u>#23#0#1#</u>
	Temp control - OFF (Default)	(30) <u>#23#0#0#</u>

Category	Function	Command
	Set temp control parameters	(31) <u>#24#0#mode#low-temp#high-temp#</u>
Temperature alarm	Temperature alarm - ON	(32) <u>#21#0#1#</u>
	Set temp range	(33) <u>#22#0#MinTemp#MaxTemp#</u>
	Temperature alarm - OFF (Default)	(34) <u>#21#0#0#</u>
Twilight control	Twilight power control - ON	(35) <u>#55#1#</u>
	Set delay turn off power at dawn	(36) <u>#55#1#time#</u>
	Twilight power control - OFF (Default)	(37) <u>#55#0#</u>
Wireless sensor alarm	Pair alarm sensor	(38) <u>#30#1#name#</u>
	Pair emergency sensor	(39) <u>#30#2#name#</u>
	Pair remote control	(40) <u>#30#3#</u>
	Check sensor list	(41) <u>#30#</u>

Category	Function	Command
	Remove single sensor	(42) <u>#44#name#</u>
	Remove all sensors	(43) <u>#44#</u>
	Remove all remote control	(44) <u>#45#</u>
	Alarm function – ON	(45) <u>#40#1#</u>
	Alarm function – OFF (Default)	(46) <u>#40#0#</u>
	Set schedule alarm parameters	(47) <u>#46#ID#day#start-time#e nd-time#</u>
	Schedule alarm - OFF (Default)	(48) <u>#47#0#</u>
	Pair wireless siren	(49) <u>#43#</u>
	Set beeper duration	(50) <u>#50#time#</u>
Slave Socket	Pair Slave socket	(51) <u>#60#name#</u>
	Remove single slave socket	(52) <u>#71#name#</u>

Category	Function	Command
	Remove all slave sockets	(53) <u>#71#</u>
SMS notification	SMS when on/off button pressed - ON (Default)	(54) <u>#03#1#</u>
	SMS when on/off button pressed - OFF	(55) <u>#03#0#</u>
	SMS when power lost or restore – ON (Default)	(56) <u>#05#1#</u>
	SMS when power lost or restore – OFF	(57) <u>#05#0#</u>
Calling control	SMS when calling control – ON (Default)	(58) <u>#49#1#</u>
	SMS when calling control – OFF	(59) <u>#49#0#</u>
	Calling control function – ON (Default)	(60) <u>#09#1#</u>
	Calling control function – OFF	(61) <u>#09#0#</u>
	Allow any number calling control - ON	(62) <u>#31#1#</u>
	Allow any number calling control - OFF(Default)	(63) <u>#31#0#</u>

SimPal-WS250 GSM Outdoor Power Socket USER MANUAL

Category	Function	Command
SMS to Users	SMS to Users – ON (Default)	(64) <u>#16#1#</u>
	SMS to Users – OFF	(65) <u>#16#0#</u>
Check status	Check all socket status	(66) <u>#07#</u>
	Check GSM signal	(67) <u>#27#</u>
	Weak GSM signal alarm – ON	(68) <u>#27#1#</u>
	Weak GSM signal alarm – OFF (Default)	(69) <u>#27#0#</u>
Reset socket	Reset to factory setting	(70) <u>#08#1234#</u>